



Limited One Year Warranty

EXPRESS WARRANTY

Coleman Brands Pty. Ltd. ("Coleman") warrants that for a period of one (1) years from the date of original retail purchase, this product will be free from defects in material and workmanship. Coleman will, depending on the circumstances, refund, repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. To the extent permitted by law and subject to your non-excludable rights under the Australian Consumer Law (Schedule 2 to the Competition and Consumer Act 2010 (Cth)) and the New Zealand Consumer Guarantees Act, which are not limited to a one (1) year period, this is your exclusive remedy for any breach of this limited warranty or for any other claims otherwise relating to this limited warranty.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits provided under this warranty are in addition to and do not affect purchaser's statutory rights under the Australian Consumer Law or other rights at law.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Please keep your proof of purchase documentation, such as the original sales receipt or the relevant credit card statement. Proof of purchase is required to obtain warranty performance. Coleman dealers, Coleman service centres, or retail stores selling Coleman® products do not have the right to alter, modify or in any way change the terms and conditions of this warranty. The warranty is valid only for products that are purchased new and unused in Australia and New Zealand, from Coleman or Coleman dealers or retailers.

WARRANTY EXCLUSIONS AND LIMITATIONS

THE AUSTRALIAN CONSUMER LAW PROVIDES CONSUMERS WITH CERTAIN 'CONSUMER GUARANTEES'. THESE GUARANTEES APPLY WHERE THE GOODS AND SERVICES COLEMAN SUPPLIES TO YOU ARE OF A KIND ORDINARILY ACQUIRED FOR PERSONAL, DOMESTIC OR HOUSEHOLD USE OR COST LESS THAN \$40,000, AND IN THE CASE OF GOODS, ARE NOT RE-SUPPLIED BY YOU. NOTHING IN THIS LIMITED WARRANTY EXCLUDES, RESTRICTS OR MODIFIES RIGHTS WHICH YOU HAVE UNDER THE AUSTRALIAN CONSUMER LAW IN RESPECT OF THE CONSUMER GUARANTEES AND ALL OF THE PROVISIONS IN THIS SECTION ARE TO BE READ SUBJECT TO THE AUSTRALIAN CONSUMER LAW.

This warranty does not cover: (a) normal wear of the product and/or its parts; (b) parts that are not genuine Coleman® parts, consumables, lost parts and accessories; (c) damage resulting from any of the following: negligent use or misuse of the product, commercial use of the product, use contrary to the operating instructions; disassembly, repair or alteration by anyone other than Coleman or Coleman service centre, the use of a part other than a genuine Coleman® part; or (d) acts of God, such as fire, flood, hurricanes and tornadoes.

To the extent permitted by the Australian Consumer Law, the Competition and Consumer Regulation 2010 and the New Zealand Consumer Guarantees Act, Coleman's liability is limited, depending on the circumstances, to refund, replacement or repair of Coleman® products or components.

For the avoidance of doubt, any and all other warranties or conditions which are not guaranteed by the Australian Consumer Law, the Competition and Consumer Regulation 2010 and the New Zealand Consumer Guarantees Act and which are not expressly included in this warranty as additional warranties or conditions are expressly excluded, including liability for incidental or consequential damages caused by the breach of any express or implied warranty or condition.

MAKING A WARRANTY CLAIM - RETURN TO COLEMAN FOR REPAIR

Take the product to an authorised Coleman retailer or Coleman service centre as soon as the warranty claim arises. You may locate the nearest authorised Coleman retailer or Coleman service centre by visiting colemanaustralia.com.au or calling 1800 224 350. Please ensure that you provide a written description of the problem with the product, together with your contact name, address and telephone number and proof of purchase.

Subject to the applicable consumer laws in your jurisdiction, you must pay for the costs of transporting the product, including packaging, freight and insurance costs, to an authorised Coleman retailer or Coleman service centre for warranty service. If the warranty claim is substantiated and accepted by Coleman, Coleman will at its cost, repair or replace any product or parts and return the product to you. Additionally, if the warranty claim is substantiated and accepted by Coleman, Coleman will reimburse you for the costs of transporting the product to an authorized Coleman retailer or Coleman service centre. Coleman reserves the right to seek reimbursement for any costs and expenses incurred for a warranty claim if the product is found to be in good working order.

If you have any questions regarding this warranty please call 1800 224 350.

Coleman Brands Pty. Ltd.
ABN 74 091 681 195
Suite W2C1, 75-85 O'Riordan Street,
Sydney Corporate Park, Alexandria, NSW 2015
Australia
Telephone: 1800 224 350
Email: customerservice@colemanaust.com.au

www.colemanaustralia.com.au.



SPIN/TWIST LANTERN



How to Use and Enjoy Your Coleman®

SPIN/TWIST LANTERN

BATTERY LANTERN



SPIN/TWIST LANTERN

IMPORTANT SAFETY INSTRUCTIONS

WARNING: When using electric appliances, basic precautions should always be followed, including the following:

1. Do not install the batteries backwards, follow the + and - symbols as shown in the instructions. Do not charge or put in a fire. Do not mix alkaline, standard, or rechargeable batteries. Do not mix old and new batteries. The batteries may explode or leak causing injury.
2. Do not leave discharged batteries in the product for an extended period of time, as this could permanently damage the product.
3. Replace all batteries at the same time.
4. Alkaline batteries can be safely disposed of with normal household waste, but should be recycled wherever possible.

SAVE THESE INSTRUCTIONS

TO INSTALL OR REPLACE BATTERIES

1. To install batteries, rotate the bottom cap counterclockwise to the locked position. Slide two release tabs to remove battery cover from bottom (Fig. 1).
2. Install batteries in the correct orientation, as shown on the battery housing (Fig. 2).
3. Close the battery cover by aligning the insert post and the side tabs. Slide the release tabs back to secure battery door (Fig. 3 & Fig. 4).




TO OPERATE LANTERN

To cycle between modes or to turn the lantern off, rotate handle on the top until desired mode is reached (Fig. 5).

TO OPERATE BATTERY LOCK

This light has the battery lock structure, which stops the battery drain from device when locked. Turn the light to locked position when not in use.

1. To engage battery lock, rotate bottom cap counterclockwise until the red cutouts are visible. The batteries are now disconnected (Fig. 6).
2. To operate lantern, rotate bottom cap clockwise where the red cutouts are hidden. The batteries are now connected (Fig. 6).

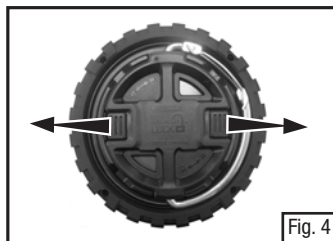

THINGS YOU SHOULD KNOW

1. Operating time for this lantern depends on whether it is run continuously or intermittently. Intermittent operation extends the runtime of a set of batteries.
2. The LED is a lifetime light source. It will never need to be replaced.
3. Always transport the lantern by the handle located on top of the lantern.
4. To clean the outside of the lantern and globe, use only a damp cloth and mild dishwashing liquid. Avoid excessive water and strong cleaner, which can damage lantern.